

Barrel sauna room (wood fired stove) installation instruction

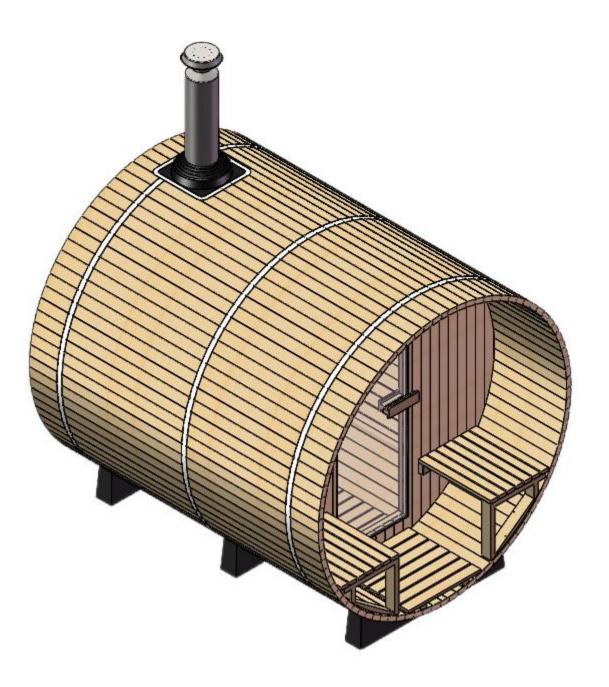


1.Assemble the front door panel

There are three parts of door panel, splice them together and fixed with screws on the door panel connectors.

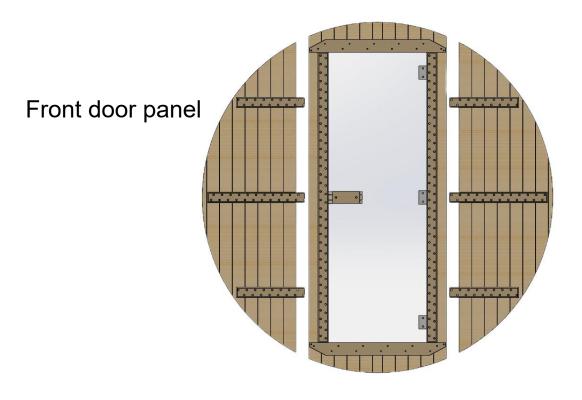


Fix with screws after splicing

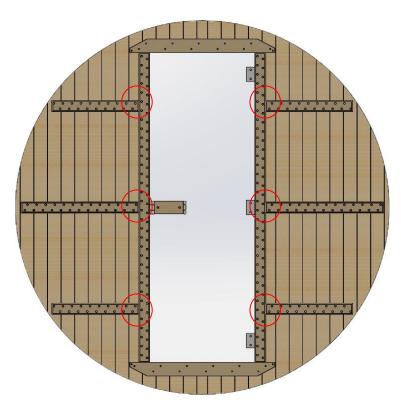


2. Assemble the bases

Place the three bases evenly, put the middle panel in the middle of the bases, and keep the distance between the end of the wall panel and the outside of the two end bases at 100mm; assemble the wall panels with the middle panel as the center according to the grooves of the panels, and fix them by nails.

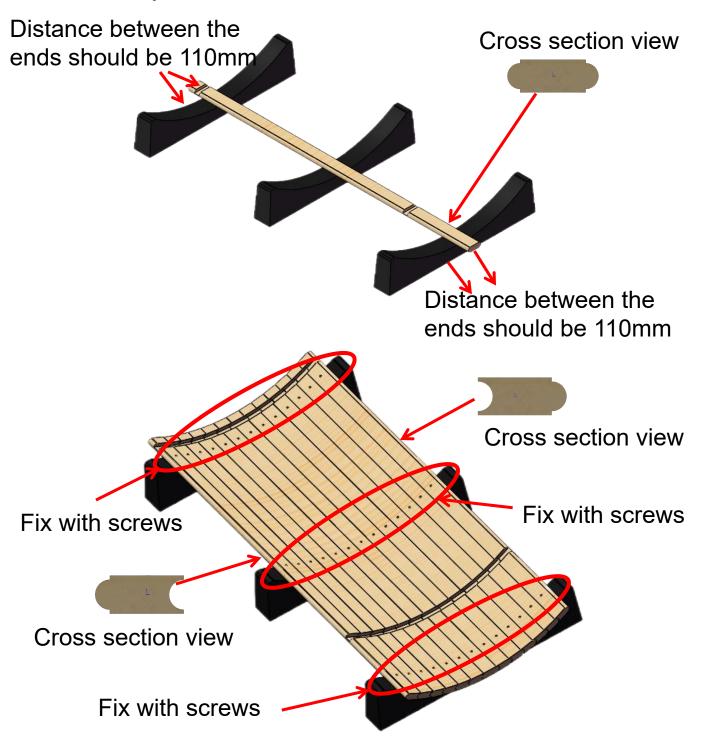


3. Place the door and back wall panels

Place the back wall panel in the groove, then place the front door in the groove, use a level to make sure this two panels are in the level, install the top wall panels with the wood stove top, fixed the front and back panels by the groove of the wall panels

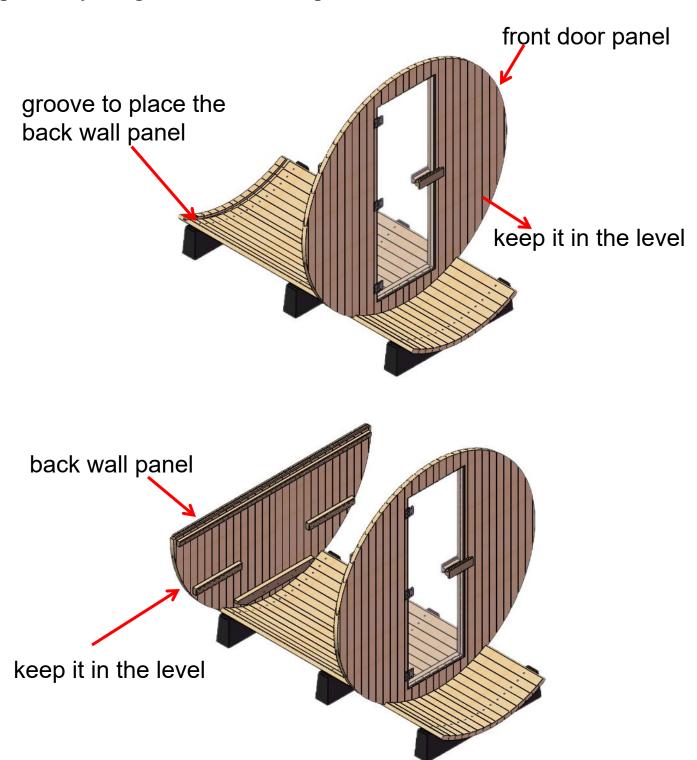


4. Assemble the back half glass

Insert the half glass into the horizontal groove of the half wood back panel, install the wood wall panels with the wood-burning stove top ceiling, and use the groove to clamp the glass and front door panel to

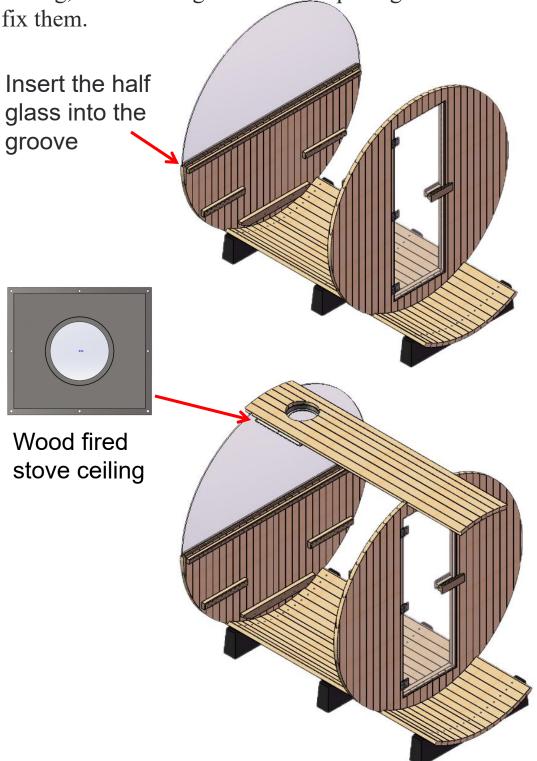


5. Assemble the wall panels

Assemble the wall panels one by one according to the grooves

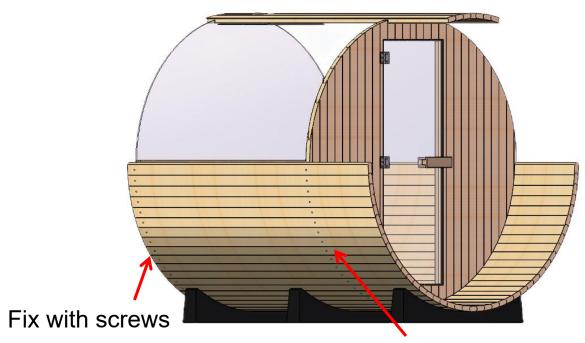


Fix with screws

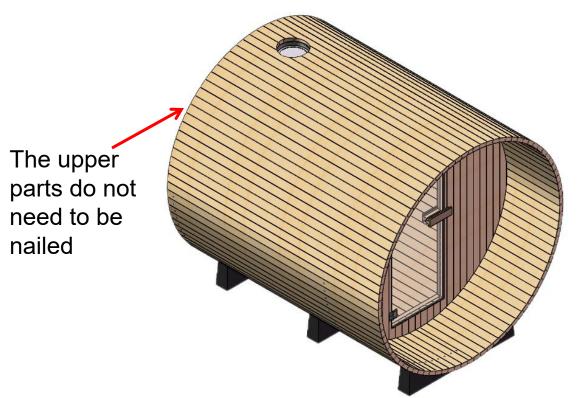


6. Assemble the stainless steel bands

Put on the steel belt evenly distribute its position according to the length of the sauna room, tighten the steel belt with a wrench, and at the same time use a rubber hammer to tighten the wall panels to eliminate the gaps between the wall panels.

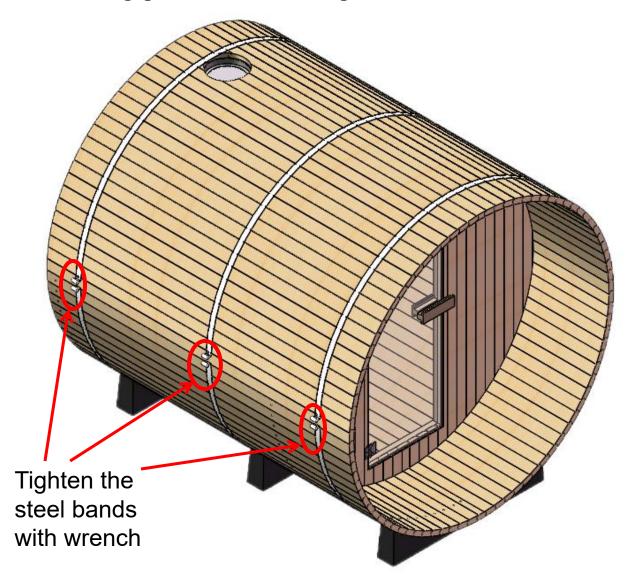

7. Assemble the benches and step


Place the steps in the middle; install the back wall panel connectors and stool supports, and place the benches on the horizontal connectors and supports.

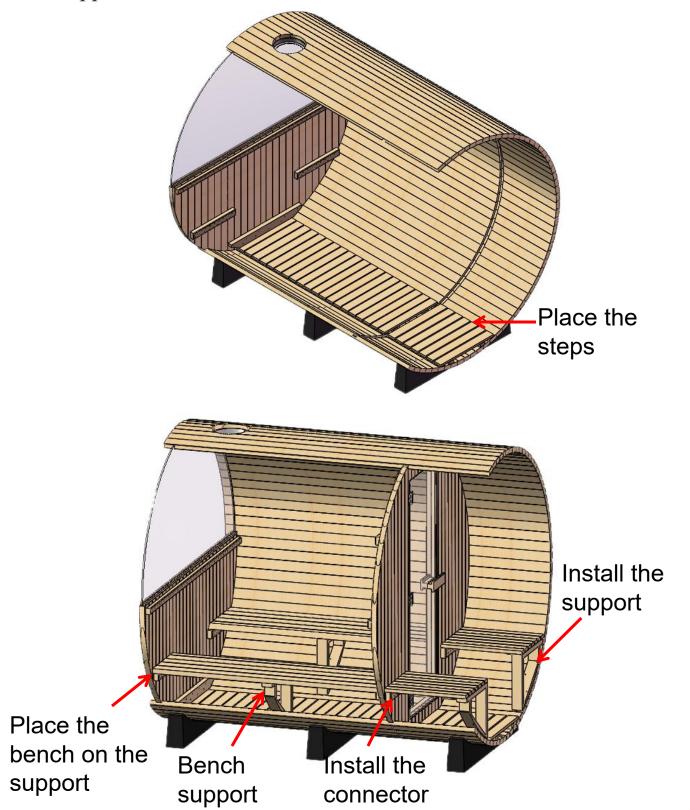


8. 1. After the sauna panels are assembled, place the two square insulation boards on the pedals and fix them with screws.

Square insulation board



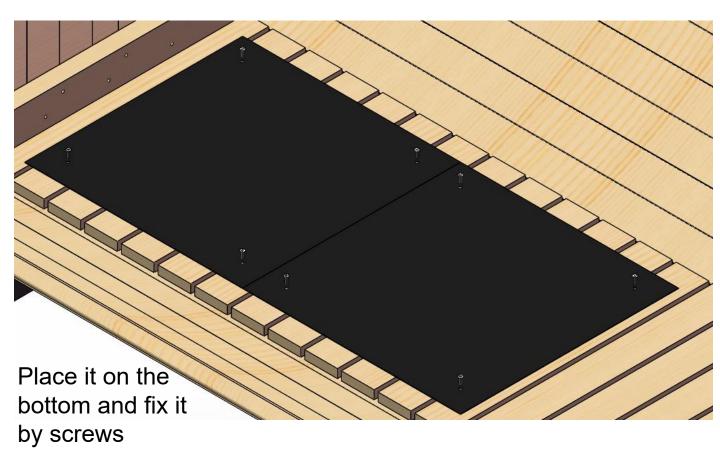


8. 2. Place the stove body on the square insulation board

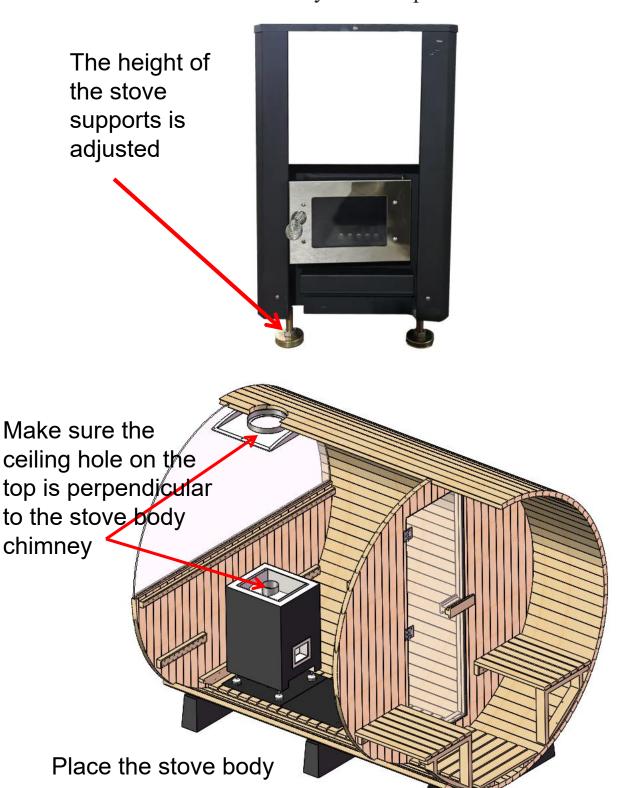


8.3.Place the insulation board on the back wall panel and fix it with

screws

Insulation boards

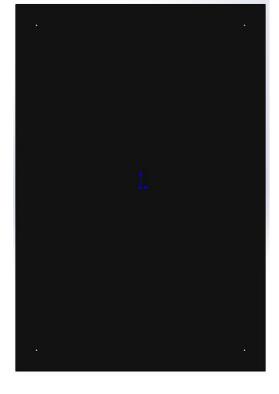

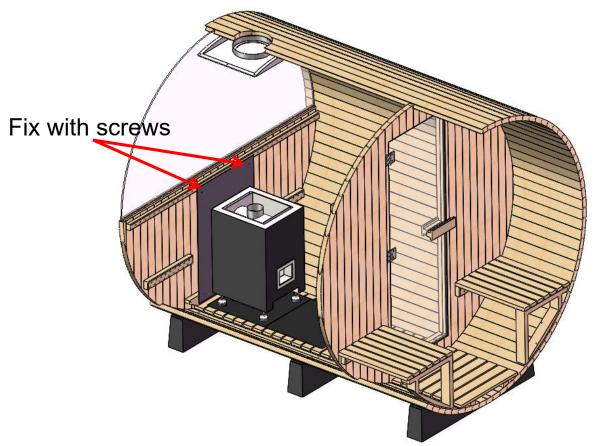



8.4. Align the chimney with the heat protection cover and insert it into the round chimney hole of the stove body.

Heat protection cover-



Insert into chimney hole of the stove body

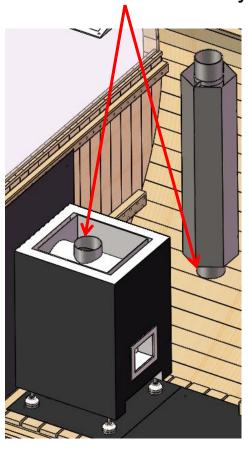

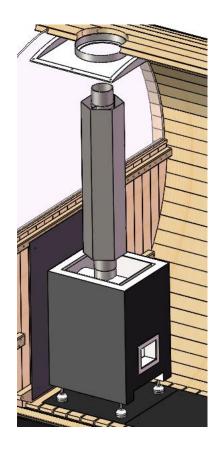



8. 5. Insert the chimney pipe from the top and align it with the round hole of the heat protection cover pipe.

Chimney pipe



Insert the chimney pipe from outside top

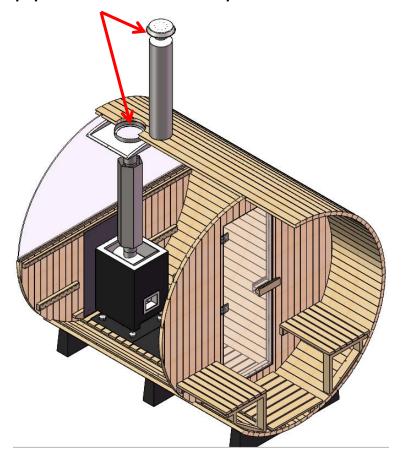

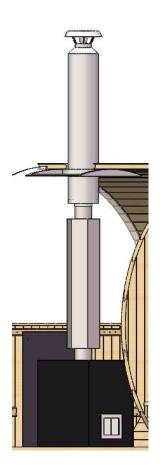

8. 6. Put the rain cover on the chimney pipe. Before putting it on, apply something like lubricating oil on the rain cover to make it easier to put it on.

Rain cover

